efbe-Schott®

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

efbe-Schott®

Minibackofen

Mini Oven

Mini-Four

Mini-Bakoven

CE

I/B Version
110207

Art.-Nr.: MBO 900
220-240V~ 1400W

Front cover page (first page)

efbe-Schott®

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

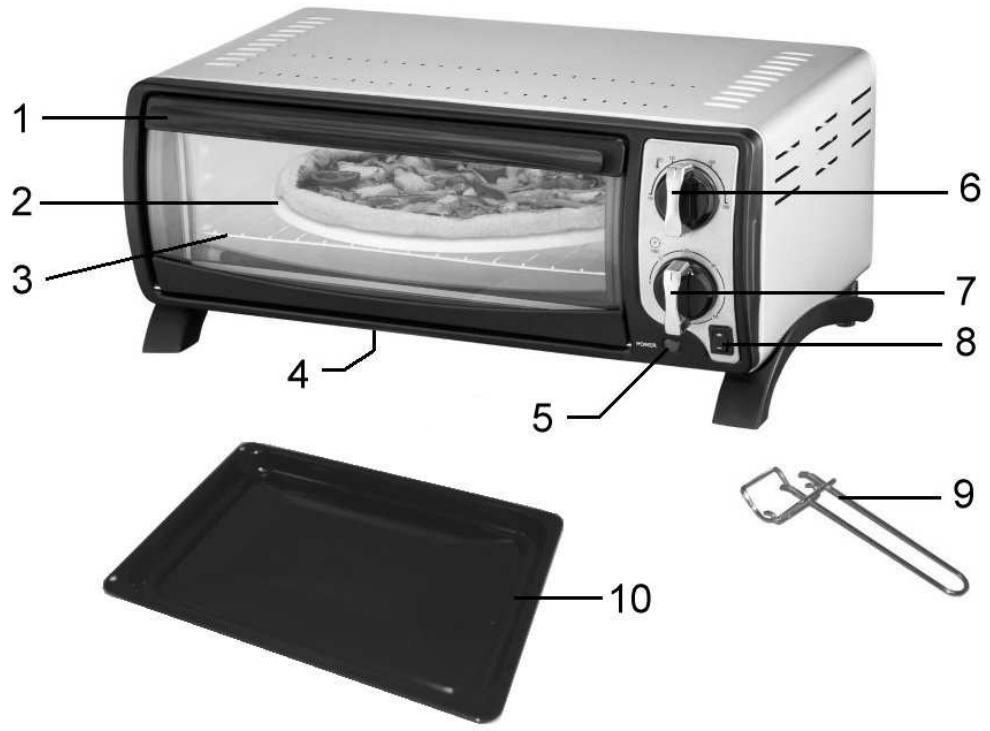

Abb. ähnlich

D

1. Türgriff
2. Pizzastein
3. Gitterrost
4. Krümelblech
5. Kontrollleuchte
6. Temperaturwahlschalter
7. Mechanische Zeitschaltuhr
8. Funktionswahlschalter
9. Transportgriff für Backblech /Gitterrost
10. Backblech

GB

1. Handle
2. Pizza stone
3. Grilling rack
4. Crumb tray
5. Pilot light
6. Thermostat
7. Mechanical timer
8. Function selector
9. Carrying handle for baking tray /grilling rack
10. Baking tray

efbe-Schott®

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

(D) GEBRAUCHSANLEITUNG

WICHTIGE SICHERHEITSVORSCHRIFTEN

- Lesen Sie aufmerksam die Gebrauchsanleitung, bevor Sie Ihr Gerät benutzen.
- Alle Tätigkeiten, an und mit diesem Gerät dürfen nur insoweit ausgeführt werden, wie sie in dieser Gebrauchsanleitung beschrieben sind.
- Falls Sie das Produkt mal einer anderen Person weitergeben möchten, legen Sie diese Gebrauchsanleitung immer mit dazu.
- Kontrollieren Sie, ob die Netzspannung mit der auf dem Gerät vermerkten Spannung übereinstimmt, bevor Sie das Gerät benutzen.

- Personen (einschließlich Kinder), die aufgrund ihrer physischen, sensorischen oder geistigen Fähigkeiten oder ihrer Unerfahrenheit oder Unkenntnis nicht in der Lage sind, das Gerät sicher zu benutzen, sollten dieses Gerät nicht ohne Aufsicht oder Anweisung durch eine verantwortliche Person benutzen.
- Lassen Sie Ihr Gerät beim Gebrauch niemals unbeaufsichtigt.
- Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.
- Überprüfen Sie regelmäßig, ob die Anschlussleitung nicht beschädigt ist. Bei Beschädigung der Anschlussleitung oder des Gerätes letzteres nicht benutzen. Für Reparaturen wenden Sie sich an einen Fachmann (*). Benutzen Sie das Gerät auf keinen Fall, wenn es sichtbare bzw. erkennbare Beschädigungen aufweist.
- Benutzen Sie das Gerät nur zu Haushaltszwecken, wie in der Bedienungsanleitung angegeben.
- Tauchen Sie das Gerät niemals in Wasser oder andere Flüssigkeiten ein, weder zum Reinigen, noch zu einem anderen Zweck. Stellen Sie das Gerät niemals in die Spülmaschine.
- Benutzen Sie das Gerät nicht in der Nähe einer Wärmequelle.
- Entfernen Sie den Stecker aus der Steckdose, bevor Sie das Gerät reinigen.
- Benutzen Sie das Gerät nicht im Freien und bewahren Sie es an einem trockenen Platz auf.
- Benutzen Sie nur Zubehör, welches vom Lieferanten empfohlen wurde. Anderes Zubehör stellt eine Gefahr für den Benutzer dar und das Gerät könnte dadurch beschädigt werden.
- Ziehen Sie niemals an der Anschlussleitung, um das Gerät zu bewegen. Achten Sie darauf, dass die Anschlussleitung nicht hängen bleibt und dies zum Fall des Gerätes führen könnte. Wickeln Sie die Anschlussleitung nicht um das Gerät herum und knicken Sie diese nicht.
- Stellen Sie das Gerät auf einen Tisch oder auf eine ebene Fläche damit es nicht umfällt.
- Achten Sie darauf, dass das Gerät vollständig erkaltet ist, bevor Sie es reinigen oder wegräumen.
- Bereiten Sie nur Nahrungsmittel zu, die zum Braten oder Garen und zum Verzehr geeignet sind. Legen Sie keine zu großen Stücke Nahrung oder Metallgegenstände in den Miniofen, um Risiken auszuschließen. Legen Sie auch kein Papier, Karton oder Plastik in den Ofen.
- Sie sollten das Gerät sauber halten, da es in direktem Kontakt mit Nahrungsmitteln ist.
- Achten Sie darauf, dass die Anschlussleitung nicht mit den heißen Teilen des Gerätes in Kontakt kommt.
- Während des Gebrauchs können zugängliche Teile des Gerätes, wie zum Beispiel die Tür oder die Rückseite, eine sehr hohe Temperatur erreichen. Berühren Sie diese Teile nicht während des Gebrauchs oder bevor das Gerät völlig erkaltet ist, sondern betätigen Sie nur die Griffe oder Regelknöpfe. Wenn das Symbol ⚠ auf einer bestimmten Fläche des Gerätes angebracht wurde, ist dies ein Warnhinweis. Es bedeutet: ACHTUNG, diese Fläche kann während des Gebrauches heiß werden.

- Achten Sie darauf, dass die heißen Teile nicht mit leicht entflammbarem Material, wie Gardinen, Tischdecken, usw. in Berührung kommen. Brandgefahr! Decken Sie das Gerät nicht ab und legen Sie nichts auf das Gerät. Achten Sie darauf, dass das Heizelement nicht mit anderen Gegenständen in Berührung kommt.
- Wir empfehlen Ihnen, eine wärmedämmende Unterlage zu benutzen (damit keine Flecken auf dem Untergrund entstehen können).
- Öl- und Fettzubereitungen können bei Überhitzung brennen. Seien Sie äußerst vorsichtig.
- Überschreiten Sie beim Toasten oder beim Aufbacken von Brot keinesfalls die Backzeit von 10 Minuten, da andernfalls das Brot verbrennen könnte. Zwar erlaubt die Zeitschaltuhr eine Einstellung von 60 Minuten, doch ist diese nicht für das Toasten oder Aufbacken von Brot bestimmt.
- Achtung: Halten Sie einen seitlichen Abstand von mindestens 10 cm, oberhalb des Gerätes einen Abstand von mindestens 25 cm ein. Bedecken Sie niemals die Lüftungsschlitze und sorgen Sie für ausreichende Luftzirkulation.
- Ihr Gerät darf niemals über eine externe Zeitschaltuhr oder irgendein anderes, separates Fernbedienungssystem eingeschaltet werden.

(*) Fachmann: Anerkannter Kundendienst des Lieferanten oder des Importeurs, der für derartige Reparaturen zuständig ist. Wenden Sie sich für eventuelle Reparaturen an diesen Kundendienst.

TECHNISCHE DATEN

- 220-240V~, 1400 W max. (Oberhitze separat 700 W)
- Mechanischer 60-Minuten-Timer mit Abschaltsignal
- Stufenlos regelbare Temperatur bis zu 250°C
- Außenmaße: Breite 455mm x Tiefe 385mm x Höhe 200mm
- Kapazität: 14 Liter max.
- Ausstattung: Gitterrost 321 x 305(225)mm max., Backblech 320 x 230 mm, Krümelblech, Transportgriff für Backblech bzw. Gitterrost, Pizzastein Ø 300mm

VOR DER ERSTEN BENUTZUNG

- Packen Sie das Gerät sowie alle Zubehörteile aus, waschen Sie die Zubehörteile und trocknen Sie diese ab.
- Beim Erstgebrauch kann es vorkommen, dass ein wenig Rauch oder ein unangenehmer Geruch entstehen. Dies ist bei der ersten Inbetriebnahme normal. Benutzen Sie Ihr Gerät daher erst einmal ohne Inhalt. Stellen Sie dazu den Timer auf ca. 10 Minuten, bei maximaler Temperatur (250°C) und den Funktionswahlschalter auf Ober- und Unterhitze.

BENUTZUNG

- Vor dem ersten Gebrauch das Gerät mit einem feuchten Tuch säubern und trocknen.
- Schließen Sie den Netzstecker an eine Schutzkontakt-Steckdose an.
- Geben Sie die Lebensmittel in den Garraum.
- Wählen Sie die gewünschte Heizeinstellung (Oberhitze oder Ober- und Unterhitze) und Temperatur mit Hilfe der Schalter am Bedienfeld.
- Stellen Sie an der mechanischen Zeitschaltuhr die gewünschte Backzeit ein. Die Kontrolllampe leuchtet.

- Wenn die Zeit abgelaufen ist, ertönt ein akustisches Signal. Sie können den Backvorgang auch jederzeit vorzeitig beenden, indem Sie den Zeit-Schalter auf Position „0" stellen, die Kontrolllampe geht aus.
- Öffnen Sie vorsichtig die Glastür, indem Sie geeigneter Weise dazu Ofenhandschuhe benutzen.
- Nehmen Sie vorsichtig und mit geeigneten Werkzeugen das Gargut aus dem Ofen. Um das Backblech oder den Gitterrost herauszunehmen nutzen Sie den Transportgriff.
- Nach dem Gebrauch den Stecker aus der Steckdose ziehen.

EINSTELLUNGEN

TEMPERATURWAHLSCHALTER
Sie können die Temperatur stufenlos zwischen 100°C bis zu maximal 250 °C einstellen.

Dieses Gerät ist vorrangig zur Zubereitung von Pizzen geeignet. Nutzen Sie dazu den mitgelieferten Pizzastein und verwenden Sie für optimale Backergebnisse die Einstellung Ober- und Unterhitze.

FUNKTIONSWAHLSCHALTER
Schalterstellung „I" - Oberhitze
Schalterstellung „II" - Unter- und Oberhitze

ZEITSCHALTUHR
Sie können die Zeit bis zu 60 Minuten frei einstellen. Um eine Zeit unter 5 Minuten einzustellen, drehen Sie den Zeitwahlschalter zuerst über 5 Minuten und setzen ihn dann auf die gewünschte Zeit zurück.

REINIGUNG

Ziehen Sie vor jeder Reinigung auf jeden Fall den Netzstecker aus der Steckdose und lassen Sie das Gerät abkühlen.

Reinigung innen

Entnehmen Sie das Backblech, den Gitterrost, den Stein und das Krümelblech und reinigen Sie die Teile mit Haushaltspapier oder einem feuchten Tuch. Gelingt es Ihnen immer noch nicht, die hartnäckigen Reste zu entfernen, benutzen Sie dann ein wenig Spülmittel. Den Stein sollten Sie keinesfalls in den Geschirrspüler zur Reinigung geben, da dieser durch das Reinigungsmittel angegriffen wird.

Reinigung außen

- Zur äußeren Reinigung des Gerätes ein feuchtes Tuch benutzen.
- Benutzen Sie keinen Metallschwamm oder Scheuermittel.
- Tauchen Sie das Gerät nicht in Wasser oder andere Flüssigkeiten.
- Das Gerät sollte nur zu Haushaltszwecken benutzt werden.

efbe-Schott®

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

BEMERKUNG

- Das Gerät hat eine kurze Anschlussleitung, damit der Benutzer nicht darüber fallen oder darauf treten kann. Sie können durchaus ein Verlängerungskabel benutzen. Achten Sie dennoch auf folgendes:
- Der Leitungsquerschnitt des Verlängerungskabels sollte mit dem der Anschlussleitung des Gerätes übereinstimmen.
- Um Unfälle zu vermeiden ist darauf zu achten, dass die Anschlussleitung nicht herunterhängt und Sie nicht darüber stolpern.

UMWELTSCHUTZ - RICHTLINIE WEEE 2002/96/EG

Zum Schutz unserer Umwelt und unserer Gesundheit sind Elektro- und Elektronik-Altgeräte nach bestimmten Regeln zu entsorgen. Dies fordert den Einsatz sowohl des Herstellers bzw. Lieferanten als auch des Verbrauchers.

Aus diesem Grund darf dieses Gerät, wie das Symbol auf dem Typenschild bzw. auf der Verpackung zeigt, nicht in den unsortierten Restmüll gegeben werden. Der Verbraucher hat das Recht, dieses Gerät kostenfrei über kommunale Sammelstellen zu entsorgen; von dort aus wird die spezifische Behandlung, Verwertung bzw. das Recycling gem. den Erfordernissen der Richtlinie sichergestellt.

GEWÄHRLEISTUNGS- UND GARANTIEBEDINGUNGEN

Für unsere Produkte gelten die gesetzlichen Bestimmungen für Gewährleistungsansprüche. Innerhalb dieser Zeit werden Mängel, welche auf Material- oder Herstellungsfehlern beruhen, behoben. Davon ausgeschlossen sind Beschädigungen an zerbrechlichen Teilen, Schäden, die durch übermäßige Beanspruchung, unsachgemäße Behandlung und Wartung sowie durch Nichtbeachtung der Gebrauchsanweisung entstehen, Schäden, welche durch Verschleiß oder infolge normaler Abnützung entstanden sind. Ebenso weisen wir darauf hin, dass die Gewährleistung bei Fremdeingriff erlischt. Hierbei wird der Verkäufer im Fall eines Schadens keine Haftung übernehmen.

Sollten Sie einen Mangel feststellen, geben Sie bitte das vollständige Gerät an ihren Händler bzw. Verkaufsstelle. Gewährleistungsansprüche gelten nur in Verbindung mit dem zugehörigen Kassenbon bzw. der Kopie einer eventuellen Reparaturrechnung, die bei Inanspruchnahme der Serviceleistung unbedingt mit vorzulegen sind/ist.

Sie haben auch die Möglichkeit, das gesäuberte Gerät mit einer kurzen, gut lesbaren Fehlerbeschreibung zusammen mit dem Kassenbon in einer frankierten Sendung an unseren Kundendienst in unserer Firma in Bad Blankenburg zu senden.

Defekte Zubehörteile führen nicht zum Umtausch des Gerätes, sondern werden kostenlos im Austausch zugesandt. In diesem Fall bitte nicht das Gerät einschicken, sondern nur das defekte Zubehörteil bestellen! **Glasbruchschäden sind grundsätzlich kostenpflichtig.**

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

Sowohl Defekte an Verbrauchszubehör bzw. Verschleißteilen, als auch Reinigung, Wartung oder der Austausch von Verschleißteilen, fallen nicht unter die Gewährleistung und sind deshalb kostenpflichtig!

NACH ABLAUF DER GESETZLICHEN GEWÄHRLEISTUNGSFRIST

Reparaturen können kostenpflichtig von entsprechendem Fachpersonal oder Reparaturservice ausgeführt werden.

efbe-Schott®

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

GB OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before using the appliance.
- Only use the appliance in the way indicated in this instruction manual.
- Should you hand over the appliance to another user, make sure to hand over the instruction manual together with the appliance.
- Check that your mains voltage corresponds to that stated on the rating plate of the appliance before using the appliance.

- People (including children) who are not able to use the appliance in a safe way, due to their physical, sensorial or mental capacity or their lack of experience or knowledge, must never use the appliance without supervision or instructions of a responsible person.
- Never leave your appliance unsupervised when in use.
- Close supervision is necessary if children are near the appliance in order to avoid that they use it as a toy.
- From time to time check the appliance and its cord for damages. Never use the appliance if cord or appliance shows any signs of damage. In that case, all repairs should be made by a competent qualified electrician(*). Never use the appliance if it shows visible damage.
- Before cleaning, always unplug the appliance from the power supply.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- Stand the appliance on a table or flat surface.
- Make sure the appliance has cooled down before cleaning and storing it.
- Only cook consumable food suitable for baking or grilling. Do not place large pieces of food or metallic utensils in the mini-oven in order to avoid all risk of fire or electrocution. Also never place the following materials in the oven: paper, cardboard or plastic...
- It is absolutely necessary to keep this appliance clean at all times as it comes into contact with food.
- Make sure the cord never comes into contact with the hot parts of the appliance.
- The temperature of the accessible surfaces, such as the door or the rear of the oven, may be very high when the appliance is in use. Never touch those surfaces during use nor before the appliance has totally cooled down, and only handle the knobs. Should the symbol ⚠ be indicated on a certain surface, you need to be careful when handling the product. This symbol means: CAUTION, this surface may get very hot during use.
- Make sure the hot parts of the appliance never come into contact with inflammable materials, such as curtains, cloth, etc. when it is in use, as a fire might occur. Also make sure not to cover the appliance and do not put anything on top of it. Make sure nothing comes into contact with the heating element of the appliance.
- It is advised to place a heat-resistant coating between your table and the appliance (this way you don't get burns on the table).
- Be extremely cautious as oil and fat preparations might catch fire if overheated.
- For slices of bread, please do not use your toaster for longer than 10 minutes as otherwise your bread will be burned. This remark is important as the maximum time is 60 minutes but this period of time should be used for other things than heating bread.
- Caution: Allow at least 25cm of space above the oven and 10cm at the sides. Do not cover the air outlet openings and make sure the oven has a sufficient airflow.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

(*) Competent qualified service: after-sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In case of need you should return the appliance to this service.

TECHNICAL DATA

- 220V-240V~, 1400 W max. (upper heat 700W separately)
- Mechanical 60-minute timer with disabling signal
- Steplessly adjustable temperature up to 250°C
- Outside measurements: length 455mm x depth 385mm x height 200mm
- Capacity: 14 liter max.
- Equipment: rack 321 x 305(225)mm max., baking tray 320 x 230mm, crumb tray, carrying handle for baking tray or rack, round pizza stone Ø 300mm

BEFORE USE

- Unpack the appliance and accessories, then wash and wipe these accessories.
- It is normal if some smoke or smell emanates from the appliance when using it for the first time. Therefore, we advise you to use your appliance empty once before the first use. Set the timer to ca. 10 minutes at the maximum temperature (230°C) on the "heat from above and below" position.

OPERATING INSTRUCTIONS

- When using for the first time, clean the appliance with a damp cloth and wipe dry.
- Plug the unit into an earthed wall socket.
- Put the food in the oven.
- Select the desired cooking mode (upper heating element or lower and upper heating element) and the temperature thanks to the buttons on the control panel.
- Turn the mechanical timer to set the desired cooking time. The pilot light will illuminate. You'll hear a signal when the cooking time has elapsed. The appliance will switch off automatically. The pilot light will go out.
- If you want to stop before the selected time is over, place the timer in the "0" position.
- Carefully open the door, preferably using an oven glove.
- Remove the food using appropriate utensils. To take out the baking tray or the rack, make use of the carrying handle.
- After use, remove the plug from the wall socket.

SETTINGS

THERMOSTAT
You can adjust the temperature steplessly between 100°C and 250°C.

This appliance is mainly suitable for the preparation of pizzas. Use the provided pizza stone and use it for best baking results, setting the upper and lower heat.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

FUNCTION SELECTOR

Setting "I" - upper heat
Setting "II" - upper and lower heat

TIMER
You can choose a desired cooking time up to 60 minutes. If you wish to set the timer to less than 5 minutes, turn it to a position higher than 5 minutes first and then set it back to the desired time.

MAINTENANCE

Before cleaning, unplug the appliance from outlet and allow it to cool down.

Inside cleaning

Remove the baking tray, the rack, pizza stone and the crumb tray and clean these parts with absorbent paper towel or a soft damp cloth. To remove baked on food you can use some mild detergent. Never clean the pizza stone in a dishwasher, because it comes under attack by the detergent.

Outside cleaning

- Wipe clean with a soft damp cloth.
- Do not use steel wool, scouring pads or abrasive cleaners.
- Do not immerse in water or any other liquid.
- This appliance is for household use only.

SHORT CORD INSTRUCTIONS

- A short power supply cord is provided to reduce the risk resulting from becoming entangled in, or tripping over a longer cord. Extension cords may be used if care is exercised in their use.
- The electrical rating of the extension cord should be at least that of the appliance.
- The longer cord should be arranged so that it will not drape over the counter top or table, where it can be pulled on by children or tripped over.

PROTECTION OF THE ENVIRONMENT – DIRECTIVE 2002/96/EC

In order to preserve our environment and protect human health, the waste electrical and electronic equipment should be disposed of in accordance with specific rules with the implication of both suppliers and users. For this reason, as indicated by the symbol on the rating label or on the packaging, your appliance should not be disposed of as unsorted municipal waste. The user has the right to bring it free of charge to a municipal collection point performing waste recovery by means of reuse, recycling or use for other applications in accordance with the directive.

TERMS OF GUARANTEE

For our products, the legal terms concerning claims under guarantee are valid. During the legal period, all material and manufacturing defects are covered. No claims will be accepted for broken accessories, defects resulting from inappropriate use or care, excessive wear due to

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

intensive use, wrong use due to the non-observance of the instruction manual, or normal wear and tear. No guarantee claims will be accepted if the appliance has been modified or if attempts have been made to repair the appliance. In such case, the vendor cannot be held responsible in case of accidents.

If you detect a defect, please contact your vendor or shop and return your complete appliance in its original packaging together with the receipt. Claims under guarantee will only be valid if the receipt or a copy of a repair bill is handed over with the appliance that needs repair.

Or send the appliance cleaned, well packed and with a short, easily readable description of the default as well as the receipt freight prepaid to our customer service in our firm in Bad Blankenburg.

In case of a defective accessory, the complete appliance will not be exchanged, but only the accessory will be sent free of charge. In such case, do not return the complete appliance but only order the accessory! **In case of glass damages, glass spare parts will be charged.** Pieces undergoing wear and tear as well as cleaning and maintenance or the exchange of worn out pieces are not covered by the guarantee and will thus be charged!

AFTER THE LEGAL PERIOD OF GUARANTEE

Repairs after the guarantee period can be performed at a charge by a competent qualified technician or a repair service.

efbe-Schott®

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.